

Make	Model	Displacement	Year	Country	Engine	Info	Position
CAN AM (BRP)	COMMANDER E 4X4	48 V	2014	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER E 4X4	48 V	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER E 4X4 LSV	48 V	2014	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER E 4X4 LSV	48 V	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER E 4X4 LSV SE	48 V	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER E 4X4 XT	48 V	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI	1000	2011	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI	1000	2012	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI	1000	2013	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI	1000	2014	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2013	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2014	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2015	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2016	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2017	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited	1000	2012	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2013	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2014	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2015	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2016	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2017	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max DPS	1000	2014	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max DPS	1000	2015	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max Limited DPS	1000	2015	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max DPS	1000	2016	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max Limited DPS	1000	2016	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max DPS	1000	2017	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max Limited DPS	1000	2017	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI X	1000	2011	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI X	1000	2012	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI X DPS	1000	2013	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT	1000	2011	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT	1000	2012	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2013	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2014	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT-P DPS	1000	2014	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max XT DPS	1000	2014	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2015	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT-P DPS	1000	2015	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	COMMANDER 1000 EFI Max XT DPS	1000	2015	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2016	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT-P DPS	1000	2016	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max XT DPS	1000	2016	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2017	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT-P DPS	1000	2017	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max XT DPS	1000	2017	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4	976	2016	ALL	54 KW(73 PS)	Lug nut ALUG14BX	Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4	976	2017	ALL	54 KW(73 PS)	Lug nut ALUG14BX	Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 DPS	976	2016	ALL	54 KW(73 PS)	Lug nut ALUG14BX	Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 DPS	976	2017	ALL	54 KW(73 PS)	Lug nut ALUG14BX	Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS	976	2016	ALL	54 KW(73 PS)	Lug nut ALUG14BX	Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS CAB	976	2016	ALL	54 KW(73 PS)	Lug nut ALUG14BX	Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS	976	2017	ALL	54 KW(73 PS)	Lug nut ALUG14BX	Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS CAB	976	2017	ALL	54 KW(73 PS)	Lug nut ALUG14BX	Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4	800	2016	ALL	38 KW(51 PS)	Lug nut ALUG14BX	Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4	800	2017	ALL	38 KW(51 PS)	Lug nut ALUG14BX	Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 DPS	800	2016	ALL	38 KW(51 PS)	Lug nut ALUG14BX	Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 DPS	800	2017	ALL	38 KW(51 PS)	Lug nut ALUG14BX	Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 XT DPS	800	2016	ALL	38 KW(51 PS)	Lug nut ALUG14BX	Front/Rear

CAN AM (BRP)	DEFENDER HD8 4X4 XT DPS	800	2017	ALL	38 KW(51 PS)	Lug nut ALUG14BX	Front/Rear
CAN AM (BRP)	OUTLANDER 330 HO 2x4	330	2003	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 330 HO 4X4	330	2003	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 2x4	400	2003	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2003	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 330 HO 2x4	330	2004	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 330 HO 4X4	330	2004	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 2x4	400	2004	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2004	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 330 HO 2x4	330	2005	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 330 HO 4X4	330	2005	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2005	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2006	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4	650	2006	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4	800	2006	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4	500	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4	650	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4	800	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 400 EFI HO 4X4	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4	500	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4	650	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4	800	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2009	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2010	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2011	ALL	24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2011	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2012	ALL	15 KW(20 PS); 30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2012	ALL	15 KW(20 PS); 24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4	1000	2012	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2012	AMERICA	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2013	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2013	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4	1000	2013	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2013	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2014	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2014	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2014	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4	450	2017	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4	450	2018	ALL	29 KW(39 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4	427	2019	AMERICA	28 KW(38 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4	427	2020	ALL	28 KW(38 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4	570	2020	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 DPS	500	2013	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 DPS	1000	2013	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2013	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 DPS	500	2014	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 DPS	1000	2014	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2014	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 DPS	500	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 DPS	450	2017	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 DPS	450	2018	ALL	29 KW(39 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 DPS	427	2019	AMERICA	28 KW(38 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 6x6 DPS	450	2019	AMERICA	28 KW(38 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 DPS	427	2020	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2004	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2005	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2006	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max	650	2006	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max	800	2006	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 Max	500	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max	650	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max	800	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max LTD	800	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI HO 4X4 Max	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 Max	500	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max	650	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max	800	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max LTD	800	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2009	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2010	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2011	ALL	24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2011	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2012	ALL	15 KW(20 PS); 24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2012	AMERICA	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2012	AMERICA	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2013	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max Limited DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2013	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2013	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max DPS	500	2013	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max DPS	1000	2013	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2013	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2014	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max Limited DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2014	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2014	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max DPS	500	2014	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max DPS	1000	2014	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2014	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max Limited DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max DPS	500	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max	450	2017	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max DPS	450	2017	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max	450	2018	ALL	29 KW(39 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max DPS	450	2018	ALL	29 KW(39 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max	427	2019	AMERICA	28 KW(38 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max DPS	427	2019	AMERICA	28 KW(38 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max	427	2020	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max DPS	427	2020	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 6x6 Max DPS	450	2020	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Mossy Oak Hunting Edition DPS	450	2018	ALL	29 KW(39 PS)	Must use ITP lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Mossy Oak Hunting Edition DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Mossy Oak Hunting Edition DPS	427	2019	AMERICA	28 KW(38 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Mossy Oak Hunting Edition DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Mossy Oak Hunting Edition DPS	427	2020	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Mossy Oak Hunting Edition DPS	570	2020	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 T	427	2019	EUROPE	28 KW(38 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 T DPS	427	2019	EUROPE	28 KW(38 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 T DPS	570	2019	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 PRO T DPS	427	2019	EUROPE	28 KW(38 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 PRO T DPS	570	2019	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max T DPS	427	2019	EUROPE	28 KW(38 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max T DPS	570	2019	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max T DPS	427	2020	EUROPE	28 KW(38 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 PRO T DPS	427	2020	EUROPE	28 KW(38 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 PRO T DPS	570	2020	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 T	427	2020	EUROPE	28 KW(38 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 T	570	2020	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 T DPS	427	2020	EUROPE	28 KW(38 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 T DPS	570	2020	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 X MR DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR	650	2013	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2013	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 X MR DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2014	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 X MR DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 X MR DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 X MR DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 X MR DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 X MR DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 X MR DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 X MR DPS	570	2020	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2003	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2004	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2004	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2005	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2005	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2006	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2006	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 XT	650	2006	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max XT	650	2006	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 XT	800	2006	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max XT	800	2006	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 XT	500	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 Max XT	500	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 XT	650	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max XT	650	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 XT	800	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max XT	800	2007	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI HO 4X4 XT	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI HO 4X4 Max XT	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 XT	500	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 Max XT	500	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 XT	650	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max XT	650	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 XT	800	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max XT	800	2008	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2009	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2009	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2010	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2010	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT-P	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT-P	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2011	ALL	24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT	650	2011	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT	650	2011	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT-P	650	2011	AMERICA	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT-P	650	2011	AMERICA	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT	1000	2012	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT	650	2012	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT	650	2012	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT-P	650	2012	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT	500	2012	ALL	15 KW(20 PS); 30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT	500	2012	ALL	15 KW(20 PS); 30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2012	ALL	15 KW(20 PS); 24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2012	AMERICA	24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2013	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT-P DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT-P DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2013	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2013	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2013	AMERICA	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT DPS	1000	2013	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT DPS	500	2013	AMERICA	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT DPS	500	2013	AMERICA	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2014	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT-P DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT-P DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2014	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2014	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2014	AMERICA	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT DPS	1000	2014	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT DPS	500	2014	AMERICA	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT DPS	500	2014	AMERICA	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT-P DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT-P DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 6x6 XT	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 XT DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT DPS	500	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT DPS	500	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT-P DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 XT DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 6x6 XT	1000	2016	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT-P DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT-P DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT-P DPS	650	2017	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT-P DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 XT DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 6x6 XT	1000	2017	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT T DPS	570	2019	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2020	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2020	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT T DPS	570	2020	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4	650	2009	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2012	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2013	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4	1000	2013	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2014	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	MAVERICK 1000 R EFI 4X4	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2015	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2016	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2017	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2015	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2016	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2017	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Limited DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 LTD	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max	650	2009	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max LTD	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max LTD	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max LTD	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max LTD	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max	800	2012	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max DPS	800	2013	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max	1000	2013	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max DPS	800	2014	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max Limited DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max Limited DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 X MR	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 X MR	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X rs	1000	2013	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X rs	1000	2013	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X rs	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X MR	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X rs DPS	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X rs DPS	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 X MR DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X rs DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X MR DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X rs DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X ds DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 X MR DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X MR DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X ds DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X rs DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X MR DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X MR DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 X MR DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 X XC	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X XC DPS	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X XC DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X XC DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X XC DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 XT	650	2009	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max XT	650	2009	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 XT	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 XT-R	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max XT	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max XT-R	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-R	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-R	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-P	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT	800	2011	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT	800	2012	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT DPS	800	2013	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P DPS	800	2013	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-P DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT DPS	800	2014	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P DPS	800	2014	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-P DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear

CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-P DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2015	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT-P DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2016	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT-P DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2017	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT-P DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT-P DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Front/Rear
CAN AM (BRP)	RENEGADE 800 EFI HO 4X4	800	2007	ALL		Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 500 EFI HO 4X4	500	2008	ALL		Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 800 EFI HO 4X4	800	2008	ALL		Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Front/Rear

CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2012	ALL	15 KW(20 PS); 52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2012	ALL	15 KW(20 PS); 30 KW(41 PS)	Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 800 EFI HO 4X4 X	800	2008	ALL		Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC	800	2012	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Front/Rear
CAN AM (BRP)	MAVERICK TURBO 1000 R EFI 4X4 X Max RS DPS	1000	2017	ALL	98 KW(133 PS)		Front/Rear
CAN AM (BRP)	MAVERICK TURBO 1000 R EFI 4X4 X ds DPS	1000	2017	ALL	98 KW(133 PS)		Front
CAN AM (BRP)	MAVERICK TURBO 900 R EFI 4X4 X3 DPS	900	2017	ALL	115 KW(156 PS)	Lug nut ALUG21BX	Front/Rear
HONDA	SXS 1000 M3 4X4 Pioneer	1000	2016	AMERICA		Lug nut ALUG18BX	Front/Rear
HONDA	SXS 1000 M3 4X4 Pioneer	1000	2017	AMERICA		Lug nut ALUG18BX	Front/Rear
KAWASAKI	KAF 620 C Mule 2500	620	1994	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 C Mule 2500	620	1995	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 C Mule 2500	620	1996	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 C Mule 2500	620	1997	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear

KAWASAKI	KAF 620 C Mule 2500	620	1998	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 C Mule 2500	620	1999	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 C Mule 2500	620	2000	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 3000	620	2001	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 3000	620	2002	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 3000	620	2003	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 3000	620	2004	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 3000	620	2005	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 3000	620	2006	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 3000	620	2007	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 3000	620	2008	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 4000	620	2009	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 4000	620	2010	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 4000	620	2011	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 4000	620	2012	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 4000	620	2013	ALL		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 4000	620	2014	AMER-ICA		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 4000	620	2015	AMER-ICA		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 4000	620	2016	AMER-ICA		Must Use Tapped Lug nut ALUG19BX	Front/Rear
KAWASAKI	KAF 620 2X4 Mule 4000	620	2017	AMER-ICA		Must Use Tapped Lug nut ALUG19BX	Front/Rear

KAWASAKI	KRF 750 4X4 Teryx	750	2008	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 4X4 Teryx NRA Outdoors	750	2008	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 4X4 Teryx LE	750	2008	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx	750	2009	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx LE	750	2009	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx Sport	750	2009	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx	750	2010	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx LE	750	2010	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx Sport	750	2010	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx LE APG HD	750	2010	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx LE	750	2011	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx LE APG HD	750	2011	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx Sport	750	2011	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx	750	2011	ALL		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx	750	2012	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx LE	750	2012	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx LE Camo	750	2012	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx Sport	750	2012	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx LE Special Graphics Edition	750	2012	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx	750	2013	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear

KAWASAKI	KRF 750 I 4X4 Teryx LE	750	2013	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx LE Camo	750	2013	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 750 I 4X4 Teryx Sport	750	2013	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 800 4X4 Teryx	800	2014	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 800 4X4 Teryx LE	800	2014	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 800 4X4 Teryx Camo	800	2014	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 800 4X4 Teryx	800	2015	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 800 4X4 Teryx LE	800	2015	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 800 4X4 Teryx Camo	800	2015	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 800 4X4 Teryx	800	2016	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 800 4X4 Teryx LE	800	2016	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 800 4X4 Teryx Camo	800	2016	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 800 4X4 Teryx LE	800	2017	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 800 4X4 Teryx Camo	800	2017	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRF 800 4X4 Teryx	800	2017	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 750 4X4 Teryx4	750	2012	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 750 4X4 Teryx4 EPS	750	2012	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 750 4X4 Teryx4 EPS LE	750	2012	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 750 4X4 Teryx4 EPS Camo	750	2012	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 750 4X4 Teryx4	750	2013	AMERICA		Must Use Flat Lug nut ALUG16BX	Front/Rear

KAWASAKI	KRT 750 4X4 Teryx4 EPS	750	2013	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 750 4X4 Teryx4 EPS Camo	750	2013	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 750 4X4 Teryx4 EPS LE	750	2013	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 800 4X4 Teryx4	800	2014	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 800 4X4 Teryx4 LE	800	2014	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 800 4X4 Teryx4 Camo	800	2014	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 800 4X4 Teryx4	800	2015	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 800 4X4 Teryx4 LE	800	2015	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 800 4X4 Teryx4 Camo	800	2015	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 800 4X4 Teryx4 LE	800	2016	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 800 4X4 Teryx4 Camo	800	2016	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 800 4X4 Teryx4	800	2016	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 800 4X4 Teryx4 LE	800	2017	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 800 4X4 Teryx4 Camo	800	2017	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear
KAWASAKI	KRT 800 4X4 Teryx4	800	2017	AMER-ICA		Must Use Flat Lug nut ALUG16BX	Front/Rear